

BORESCOPE

Hawkeye Rigid Borescopes




Choose a rigid Borescope when the entry path is straight. Rigids offer the higher resolution, better image quality, more durability and are less expensive than flexible fiberscopes. Hawkeye Classic and Pro Rigid Borescopes have DOV's of 0°, 30° and 90°. Hawkeye Blue Rigid Borescopes offer a wider selection of DOV's and lengths.



Hawkeye Flexible Borescopes




When your entry path is curved, you will need a Hawkeye Classic, Pro, or Blue Flexible Borescope. With 0-, 2-, or 4-way articulation, up to 25,000 pixel image resolution, and flexible, durable, Tungsten sheathing. Hawkeye Flexible Borescopes are the finest fiber scopes on the market.

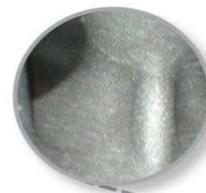

Hawkeye V2 Video Borescopes

V2 Video borescopes offer 4-way articulation, full portability, 5x the image resolution of fiberscopes. The rugged and durable Tungsten sheathing adds value to these videoscopes. The new updated LED offers more light providing a clearer image. Integrated still and video image capture.

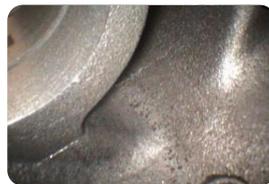

BORESCOPE

Hawkeye Semi-Rigid and Micro Flex



Hawkeye Pro Microflex and Semi-Rigid borescopes offers diameters as small as .5mm and up to 30,000 image pixels, all in "semi-rigid" Nitinol or Polyamide sheathing.



Luxxor Portable Camera



Any Hawkeye Pro Borescope can be transformed into a portable video borescope with the Luxxor Portable Camera. The LPC delivers sharp, bright video and still images. You can view on a portable monitor or any computer or benchtop video monitor.

